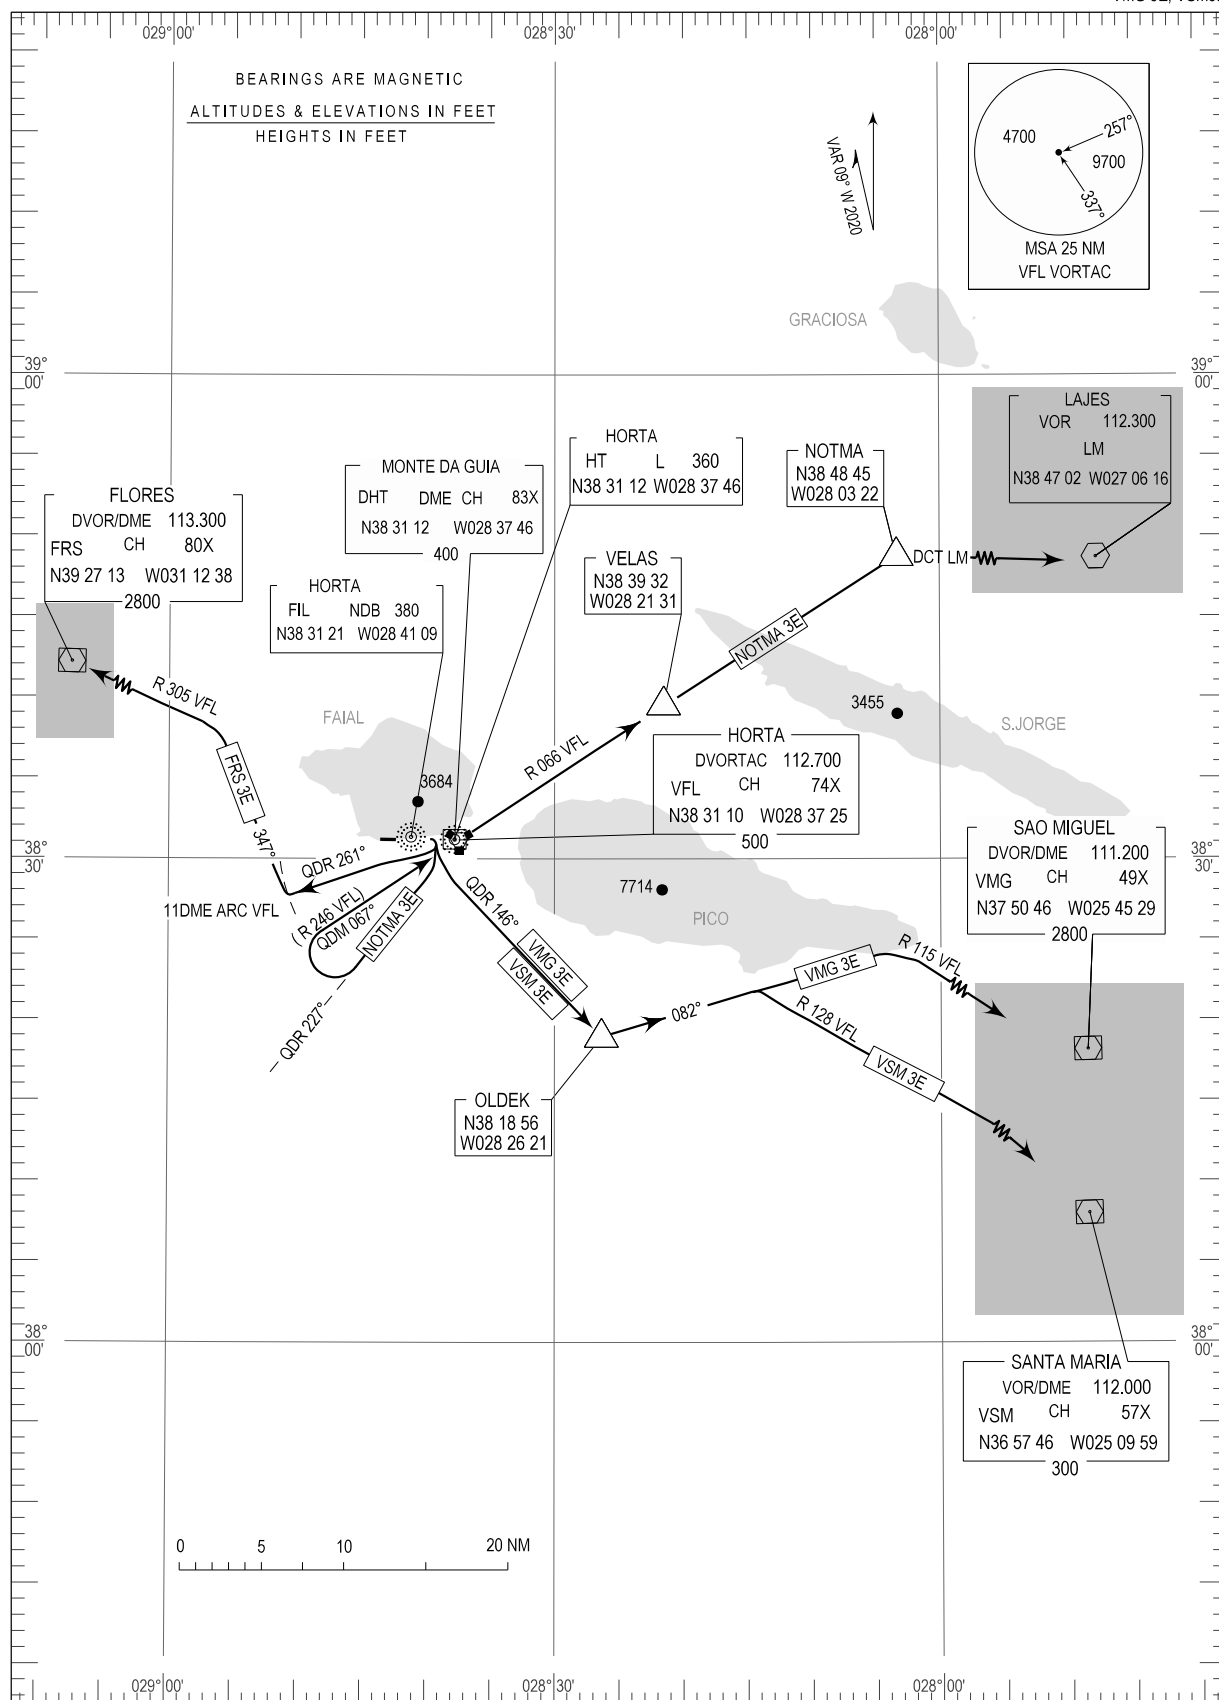


STANDARD DEPARTURE CHART -  
INSTRUMENT (SID) - ICAOTRANSITION ALTITUDE  
5000TWR 118.000  
APP 120.600

HORTA (LPHR)

RWY 10

FRS 3E, NOTMA3E  
VMG 3E, VSM3E

MAGVAR updated.

**STANDARD INSTRUMENT DEPARTURE (SID) RWY 10**

| RUNWAY 10  |                                                                                                                                                                                                                                         |                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Designator | Route                                                                                                                                                                                                                                   | Remarks                                                                                                                 |
| FRS3E      | Turn right to intercept HT Locator QDR 261;<br>at VFL DME arc 11, turn right to track 347 to intercept VFL RDL305<br>to FRS at or above FL100 (FIL QDR 305 below FL100)                                                                 | -                                                                                                                       |
| VSM3E      | Turn right to intercept FIL QDR 146 to OLDEK;<br>at OLDEK turn left direct to track 082 to intercept VFL RDL 128 to<br>VSM at or above FL100 (FIL QDR 127 below FL100)                                                                  | Note - Do not overshoot QDR 146 (or VFL RDL154) to the East,<br>before Point OLDEK. Cross OLDEK at or above 5000FT QNH. |
| VMG3E      | Turn right to intercept FIL NDB QDR 146 to OLDEK;<br>at OLDEK turn left to track 082 to intercept VFL RDL 115 to VMG at<br>or above FL100 (FIL QDR 115 below FL100)                                                                     | Note - Do not overshoot QDR 146 (or VFL RDL154) to the East,<br>before point OLDEK. Cross OLDEK at or above 5000FT.     |
| NOTMA3E    | Turn right to intercept HT Locator QDR 227. When passing 2500FT<br>QNH turn right to intercept QDM 067 to HT Locator (RDL246 to VFL<br>VORTAC at or above 5000FT). Continue on VFL RDL066 to<br>NOTMA; from NOTMA proceed direct to LM. | Note - When inbound to HT/VFL cross at or above climbing :<br>VFL DME Arc 5NM - 4000FT QNH. HT/VFL - 5000FT QNH         |