


STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAOMADEIRA APPROACH 119.605
PORTO SANTO TOWER 120.055

PORTO SANTO (LPPS)

RNAV RWY 36

DEGUN 1N, FAGUT 1N

ILCAT 1N, PILIM 1N

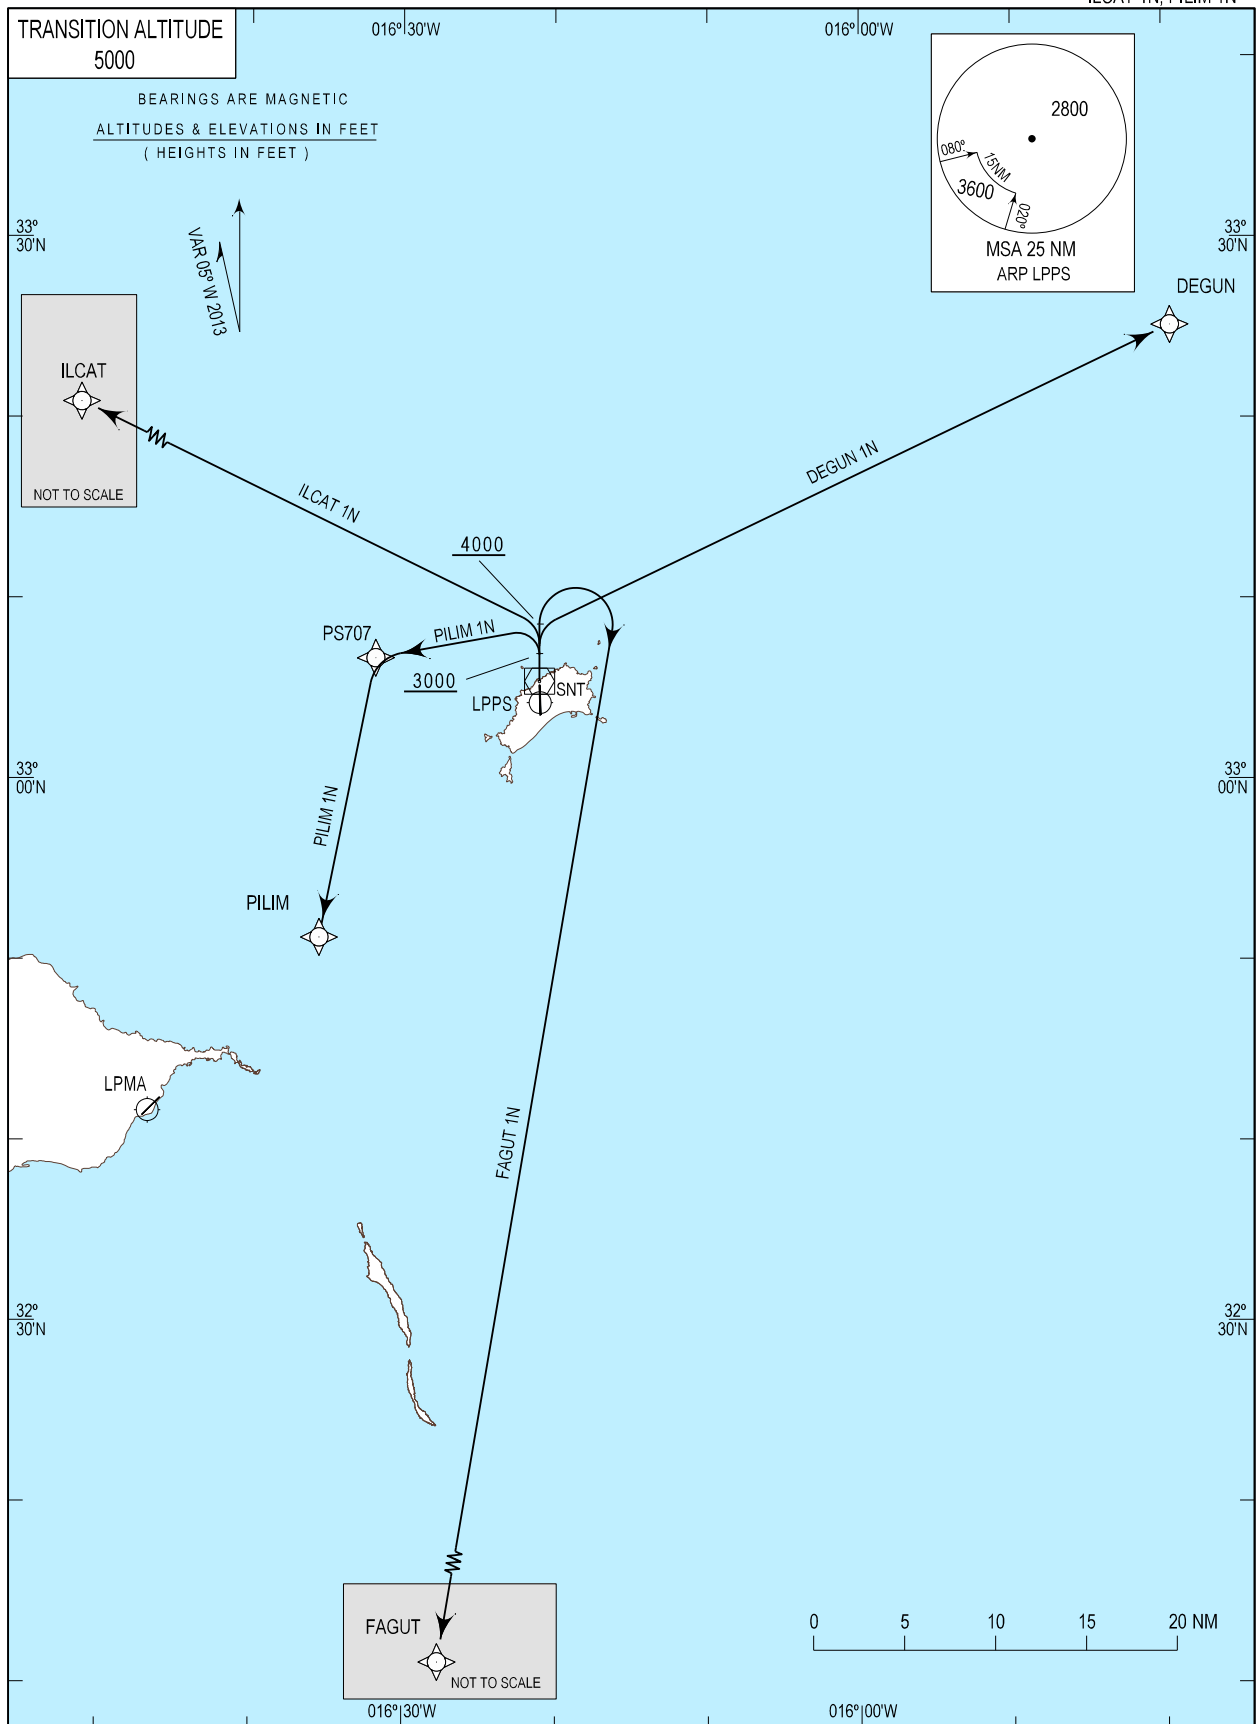

SID Procedure Coding Tables

PORTO SANTO SID RNAV 1 RWY 36 DEGUN1N

Path Terminator	Waypoint			Course/Track MAG (True)	Dist NM	Turn Direction	Constraints		Navigation Specification	Remarks
	Identifier	Flyover	Coordinates				Level	Speed		
CA	-	N	-	-	-	-	@3000FT	-	RNAV1	-
DF	DEGUN	N	332507.35N 0153929.87W	-	-	Right	-	-	RNAV1	

Designator	Route	After Take-off		Remarks
		Climb to ALT/FL	Contact	
DEGUN1N	Climb straight ahead at 3000FT QNH turn right to DEGUN.	FL60	Madeira Approach when passing 1000FT.	-

PORTO SANTO SID RNAV 1 RWY 36 FAGUT1N

Path Terminator	Waypoint			Course/Track MAG (True)	Dist NM	Turn Direction	Constraints		Navigation Specification	Remarks
	Identifier	Flyover	Coordinates				Level	Speed		
CA	-	N	-	-	-	-	@4000FT	-	RNAV1	-
DF	FAGUT	N	320632.88N 0162818.43W	-	-	Right	-	-	RNAV1	

Designator	Route	After Take-off		Remarks
		Climb to ALT/FL	Contact	
FAGUT1N	Climb straight ahead at 4000FT QNH turn right to FAGUT.	FL60	Madeira Approach when passing 1000FT.	-

PORTO SANTO SID RNAV 1 RWY 36 ILCAT1N

Path Terminator	Waypoint			Course/Track MAG (True)	Dist NM	Turn Direction	Constraints		Navigation Specification	Remarks
	Identifier	Flyover	Coordinates				Level	Speed		
CA	-	N	-	-	-	-	@3000FT	-	RNAV1	-
DF	ILCAT	N	332602.99N 0170254.37W	-	-	Left	-	-	RNAV1	

Designator	Route	After Take-off		Remarks
		Climb to ALT/FL	Contact	
ILCAT1N	Climb straight ahead at 3000FT QNH turn left to ILCAT.	FL60	Madeira Approach when passing 1000FT.	-

PORTO SANTO SID RNAV 1 RWY36 PILIM1N

Path Terminator	Waypoint			Course/Track MAG (True)	Dist NM	Turn Direction	Constraints		Navigation Specification	Remarks
	Identifier	Flyover	Coordinates				Level	Speed		
CA	-	N	-	-	-	-	@3000FT	-	RNAV1	At PS707 or passing 4000FT, whichever is earlier, turn left to PILIM.
TF	PS707	N	330642.73N 0163147.91W	-	-	Left	-	-	RNAV1	
DF	PILIM	N	325114.86N 0163528.64W	196 (191.4)	15.74	Left	-	-	RNAV1	

Designator	Route	After Take-off		Remarks
		Climb to ALT/FL	Contact	
PILIM1N	Climb straight ahead at 3000FT turn left to PS707. At PS707 or passing 4000FT whichever is earlier turn left to PILIM.	FL60	Madeira Approach when passing 1000FT.	-